



UTA DSP SERIES

How to Extract and Install the Braincore Software

IMPORTANT

Please follow these instructions **exactly**.

DO NOT use the standard Windows ZIP extractor.

The Braincore software must be extracted using **WinRAR**.


Step 1 – Download the Braincore Software

First, download the **Braincore software** for the UTA DSP Series from the AUDIOCENTER using the link below:

<https://audiocenter.com/software/>

The downloaded software will be provided as a **ZIP file**.

Do not extract the ZIP file yet.

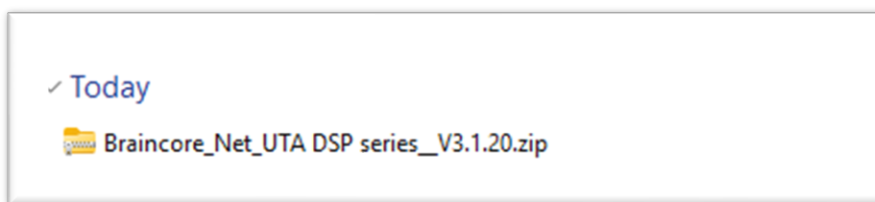

Step 2 – Download WinRAR

Next, download **WinRAR**.

VERY IMPORTANT

DO NOT use the standard Windows ZIP extractor.

You must use **WinRAR** to extract the Braincore software correctly.



Search

Language: English

WinRAR 7.23

Compress, Encrypt, Package and Backup with only one utility

With over 500 million users worldwide, WinRAR is the world's most popular compression tool!

There is no better way to compress files for efficient and secure file transfer. Providing fast email transmission and well-organized data storage options, WinRAR also offers solutions for users working in all [industries and sectors](#).

WinRAR is a powerful archiver extractor tool, and can open all popular file formats.

RAR and WinRAR are [Windows 11™](#) and [Windows 10™](#) compatible; available in over 40 languages; compatible with several operating systems (OS), and it is the only compression software that can work with Unicode. [Read more...](#)



Buy WinRAR

[Buy WinRAR](#)



Download WinRAR





Step 3 – Install WinRAR

Once WinRAR has finished downloading:

1. Open the WinRAR installer.
2. Follow the installation instructions.
3. Complete the WinRAR installation.

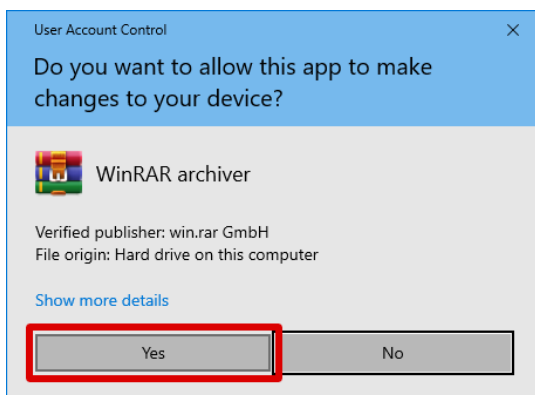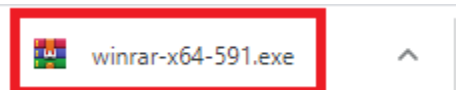

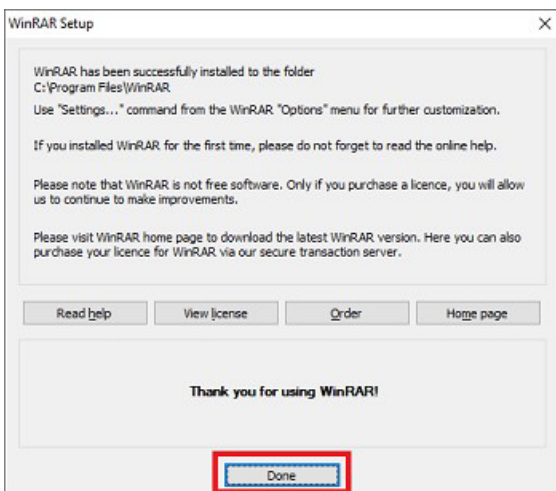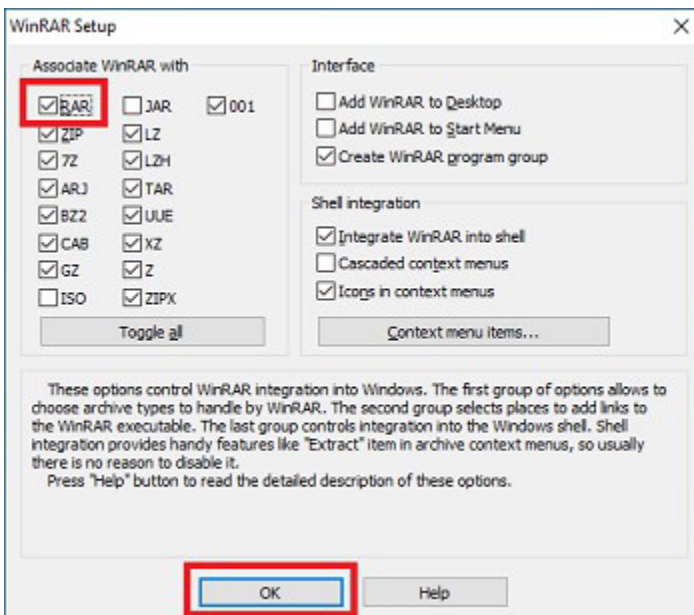

Step 4 – Restart the Computer

Once WinRAR has been installed, **restart the PC**.


Do not continue with the Braincore software installation until the computer has restarted.

Step 5 – Open the Braincore ZIP File with WinRAR

After the PC has restarted:

1. Locate the **Braincore ZIP file** that you downloaded earlier.
2. **Right-click** on the Braincore ZIP file.
3. Select:

Open with → WinRAR

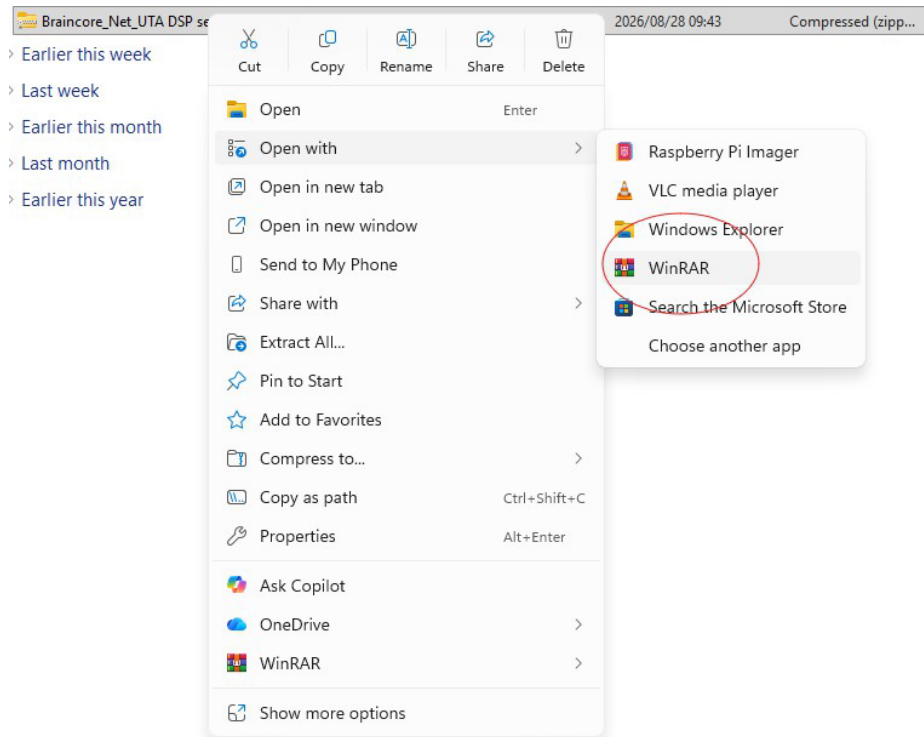

Step 6 – Extract the Files Using “Extract To”

Once the ZIP file is open inside WinRAR, you must extract the files correctly.


VERY IMPORTANT

DO NOT drag the files out of the WinRAR window.

You must use the **“Extract To”** button inside WinRAR.

1. Click the **Extract To** button at the top of the WinRAR window.
2. Select the location where you would like the Braincore software to be extracted.
3. Click **OK** to start the extraction.

Wait for WinRAR to finish extracting the files.

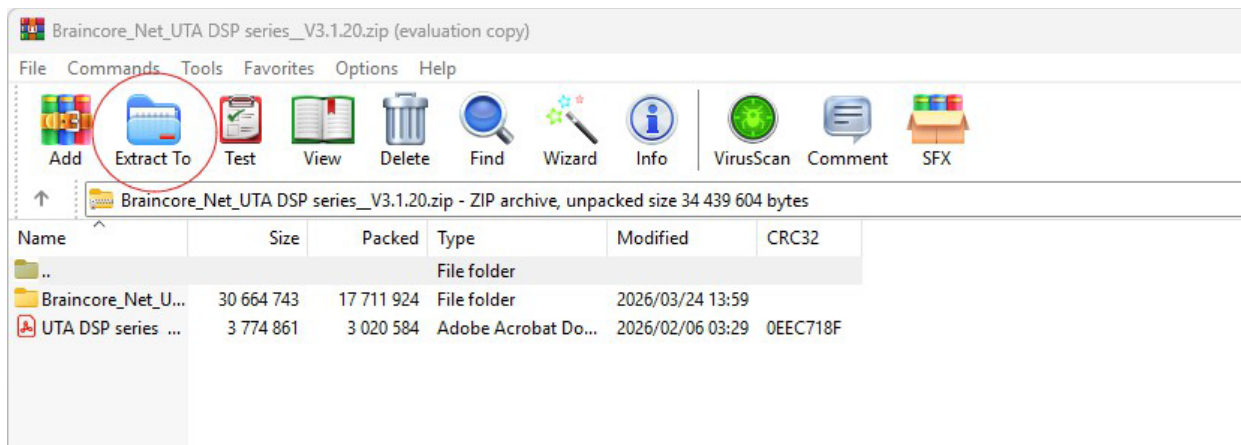

SCREENSHOT

Step 7 – Open the Extracted Folder

Once WinRAR has finished extracting the software:

1. Go to the location you selected during the extraction process.
2. Open the newly extracted **Braincore** folder.

Step 8 – Open Braincore Net

Inside the extracted folder, locate:

Braincore Net.exe

Double-click the **Braincore Net.exe** file to open the software.

Earlier this year				
SystemSet.dat	2026/04/08 11:10	DAT	4 KB	
Braincore Net(UTA).exe.config	2026/03/24 14:00	Configuration Sou...	3 KB	
Mconsole.Modules.dll	2026/03/24 04:28	Application extens...	2 841 KB	
Braincore Net(UTA).exe	2026/03/24 04:17	Application	434 KB	
Mconsole.Controls.dll	2026/03/24 04:16	Application extens...	453 KB	
Mconsole.Commom.dll	2026/03/24 04:16	Application extens...	1 013 KB	
DevOperate.dll	2026/03/24 04:16	Application extens...	2 558 KB	
AppHelper.dll	2026/03/24 04:16	Application extens...	305 KB	
AppResources.dll	2026/03/24 04:16	Application extens...	209 KB	
EQPresets	2026/03/24 14:03	File folder		
ReadMe	2026/03/24 14:03	File folder		
SnkPresets	2026/03/24 14:03	File folder		

IMPORTANT REMINDER

For the Braincore software to extract correctly:

- ✓ Use WinRAR
- ✓ Restart the PC after installing WinRAR
- ✓ Open the ZIP file with WinRAR
- ✓ Use the “Extract To” button
- ✗ DO NOT use the standard Windows ZIP extractor
- ✗ DO NOT drag the files directly out of WinRAR

Once the files have been properly extracted, launch the software using **Braincore Net.exe**.

